


# Model A Ford MECHANICS HANDBOOK

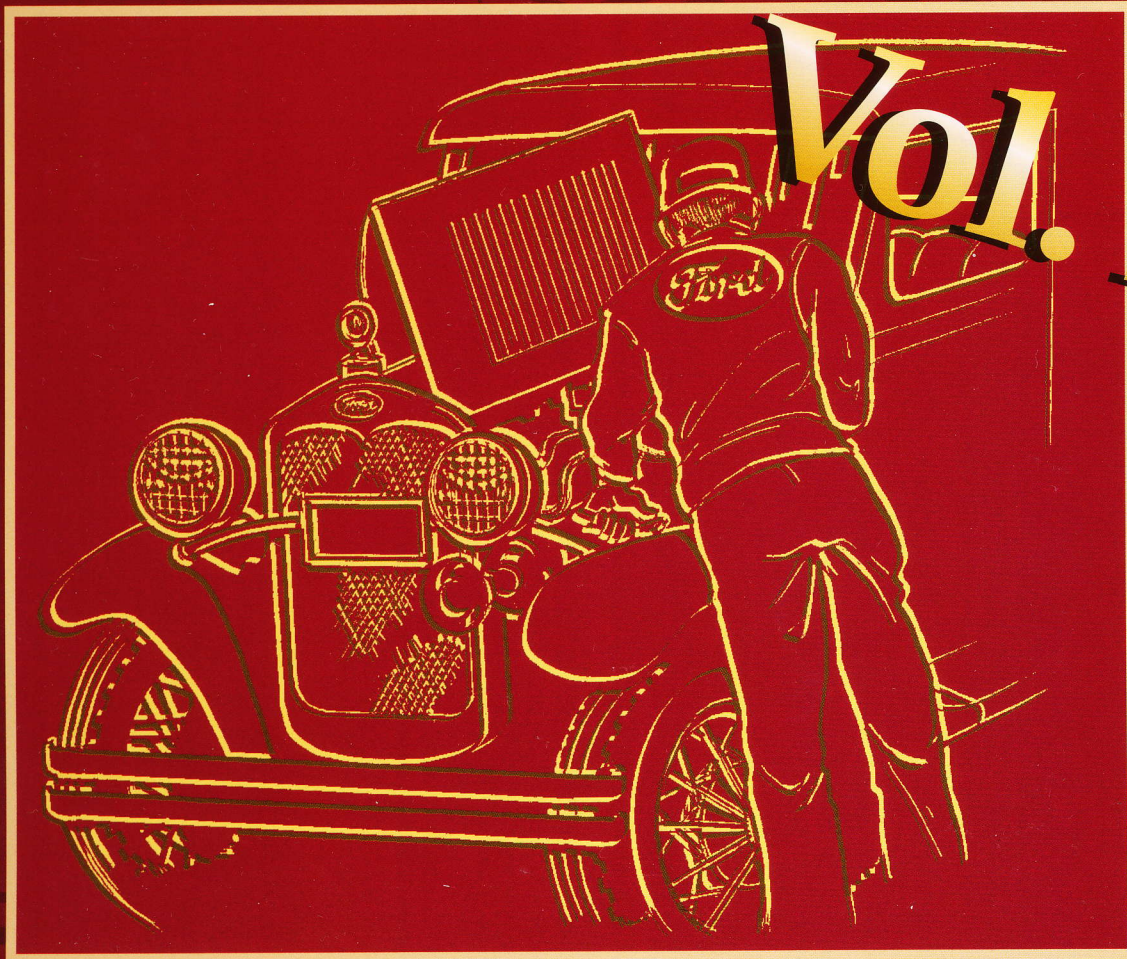

**A COMPLETE GUIDE  
FOR SERVICE AND MAINTENANCE**

- OVER 500 ILLUSTRATIONS • TROUBLE ANALYSIS
- SERVICE ADJUSTMENTS • STEP-BY-STEP ILLUSTRATED PROCEDURES

**Les Andrews**

# CONTENTS

## SECTION I SERVICE AND REPAIR

<b>AMMETER</b> .....	1-2	<b>CLUTCH</b> .....	1-65
Removing and Replacing Ammeter .....	1-4	Clutch Removal .....	1-65
<b>AXLE-FRONT</b> .....	1-4	Inspection and Repairs .....	1-66
Removing Front Axle .....	1-4	Clutch and Pressure Plate Installation .....	1-67
Installing Front Axle .....	1-8	<b>CRANK PULLEY</b> .....	1-70
<b>AXLE-REAR</b> .....	1-13	Removing Crank Pulley .....	1-70
Removing/Replacing Axle in Carrier Assembly ...	1-15	Installing Crank Pulley .....	1-73
Installing Rear Axle .....	1-16	<b>CROSS SHAFT</b> .....	1-76
<b>BATTERY</b> .....	1-18	Service Brake Cross Shaft Repairs .....	1-76
Removing Battery .....	1-18	Emergency Brake Cross Shaft Repairs .....	1-79
Battery Efficiency .....	1-18	<b>CYLINDER HEAD AND GASKET</b> .....	1-80
Installing Battery .....	1-18	Removing Head and Gasket .....	1-80
<b>BENDIX DRIVE ASSEMBLY</b> .....	1-20	Head Preparation .....	1-82
Removing Bendix .....	1-20	Cylinder Head Installed .....	1-83
Inspection - Parts Replacement .....	1-21	<b>DIFFERENTIAL/REAR END ASSEMBLY</b> .....	1-87
Installing Bendix .....	1-23	Removing Rear End Assembly .....	1-88
<b>BODY BLOCKS</b> .....	1-24	Rear End Disassembly .....	1-90
<b>BRAKES</b> .....	1-33	Differential Inspection .....	1-92
Inspecting/Repairing Mechanical Levers .....	1-33	Rear End Assembly and Bearing Preload .....	1-93
Brake Actuating Arm Repair .....	1-34	Carrier Bearing Preload .....	1-94
Disassembling Front Brakes .....	1-36	Pinion Bearing Preload .....	1-94
Drums Inspected and Reworked .....	1-38	Ring Gear Pattern and Backlash .....	1-95
Assembling Front Brakes .....	1-38	Assembling Differential .....	1-95
Centering Front Brake Shoes .....	1-39	Installing Rear End Assembly .....	1-97
Rear Brake Assembly .....	1-40	<b>DISTRIBUTOR</b> .....	1-101
Rear Drums Inspected and Reworked .....	1-42	Removing Distributor .....	1-101
Assembling Rear Brakes .....	1-42	Disassembly and Overhaul .....	1-102
Centering Rear Brake Shoes .....	1-44	Inspection and Assembly .....	1-103
Installing Emergency Brake Band .....	1-44	<b>DOOR HANDLES</b> .....	1-108
Installing Brake Rods .....	1-45	Removing Door Handles .....	1-108
<b>CAM SHAFT</b> .....	1-46	Door Handle Cleaning and Repair .....	1-108
Removing Cam Shaft .....	1-46	Disassembly .....	1-109
Installing Cam Shaft .....	1-51	<b>DRAG LINK/TIE-ROD</b> .....	1-110
<b>CARBURETOR</b> .....	1-57	Installing Drag Link .....	1-110
Removing Carburetor .....	1-57	<b>EMERGENCY BRAKE HANDLE</b> .....	1-112
Disassembly .....	1-58	Removing and Disassembling	
Inspection and Repair .....	1-60	Squeeze Grip Handle .....	1-113
Assembling Carburetor .....	1-61	Removing and Disassembling	
Assembly - Lower Body .....	1-62	Push Button Handle .....	1-114
Assembly - Upper Body .....	1-63		
Installing Carburetor .....	1-64		

## CONTENTS (continued)

<b>ENGINE OVERHAUL</b> .....	1-115	<b>GAS TANK</b> .....	1-179
Engine Removal .....	1-116	Removing Gas Tank .....	1-179
Engine Disassembly .....	1-121	Installing Gas Tank .....	1-184
Engine Inspection .....	1-127	Installing Gas Gauge .....	1-186
Engine Overhaul .....	1-130	Installing Instrument Panel .....	1-187
Engine Assembly .....	1-135	Install Gas Shut-Off Valve and Gas Line .....	1-187
Installing Crank .....	1-135	<b>GENERATOR</b> .....	1-189
Installing Valve Lifters and Camshaft .....	1-138	Removing Generator .....	1-190
Assemble Pistons and Rods .....	1-139	Disassembly, Inspection and Cleaning .....	1-190
Wrist Pin Bushings .....	1-139	Generator Assembly .....	1-192
Ring Installation .....	1-140	Installing Generator .....	1-192
Piston Ring Gap .....	1-140	<b>HORN</b> .....	1-194
Pistons Installed .....	1-141	Horn Disassembly .....	1-195
Valves and Valve Guides Installed .....	1-143	Cleaning .....	1-195
Installing Original Mushroom Valve w/ Split Guides .....	1-143	Horn Assembly .....	1-196
Installing Modern Stainless Steel Valves w/One Piece Guides .....	1-144	<b>HORN ROD</b> .....	1-199
Distributor/Oil Pump Drive Gear Installed .....	1-144	Removing Horn Rod .....	1-199
Oil Pump and Oil Pan Installed .....	1-145	<b>IGNITION SWITCH (Pop-Out)</b> .....	1-201
Installing Pan Gaskets .....	1-145	Removing Ignition Switch and Cable .....	1-202
Installing Flywheel Housing and Flywheel .....	1-146	Testing Switch and Cable .....	1-203
Clutch and Pressure Plate Installation .....	1-148	Disassembly and Repair .....	
Cylinder Head Installed .....	1-149	(1928 Through Mid 1930) .....	1-203
Thread Repair and Helicoil .....	1-159	Disassembly and Repair .....	
Preparation to Install Engine .....	1-150	(Mid 1930 through 1931) .....	1-205
Engine Installation .....	1-153	Replacing Armored Cable Ignition Wire (1928 to Mid 1930) .....	1-206
<b>FAN BELT</b> .....	1-162	Replacing Armored Cable Ignition Wire (Mid 1930 Through 1931) .....	1-206
Replacing Fan Belt .....	1-162	Installing Ignition Cable and Switch .....	1-207
<b>FAN BLADE</b> .....	1-163	<b>KING PINS</b> .....	1-209
Removing Fan Blade .....	1-163	Front Spindle Removal .....	1-210
Installing 2-Blade Fan .....	1-166	Removing Backing Plate .....	1-210
Installing 4-Blade Fan .....	1-167	Removing Spindle .....	1-211
<b>FUEL SEDIMENT BOWL</b> .....	1-169	Installing New Bushings .....	1-212
Flushing Cast Iron Sediment Bowl .....	1-169	Installing Spindles and King Pins .....	1-212
Disassembly and Cleaning (Cast Iron Bowl) .....	1-169	Installing Brake Shoes .....	1-215
Disassembly and Cleaning (Glass Bowl) .....	1-170	<b>LIGHTS</b> .....	1-216
Removing and Replacing Sediment Bowl .....	1-170	Changing Headlight Bulbs .....	1-216
<b>GAS GAUGE</b> .....	1-172	Removing Lens .....	1-216
Removing Gas Gauge .....	1-172	Removing Reflector .....	1-217
Gauge Repair and Assembly .....	1-174	Removing Connector Socket .....	1-217
Installing Gas Gauge .....	1-175	Headlight Grounding .....	1-218
<b>GAS SHUT-OFF VALVE</b> .....	1-176	<b>MOTOR MOUNTS</b> .....	1-220
Removing Gas Shut-off Valve .....	1-176	Removing Front Motor Mount .....	1-220
Disassembly and Repair .....	1-177	Removing Rear Motor Mounts .....	1-221
		Rear Motor Mount Installation .....	1-221
		Float-A-Motor Installation .....	1-222

## CONTENTS (continued)

<b>MUFFLER</b> .....	1-223	<b>SPRING - FRONT</b> .....	1-275
Muffler Removal and Installation .....	1-223	Removing Front Spring .....	1-275
<b>OIL PAN GASKET</b> .....	1-225	Disassembly and Arching .....	1-276
Removing Oil PAN .....	1-225	Front Spring Assembly .....	1-278
Replacing Oil Pan and Gasket .....	1-225	Installing Front Spring .....	1-278
<b>OIL PUMP</b> .....	1-227	<b>SPRING - REAR</b> .....	1-280
Removing Oil Pump .....	1-227	Rear Spring Removal .....	1-280
Pump Design Changes .....	1-228	Rear Spring Disassembly and Repair .....	1-281
Oil Pump Disassembly and Overhaul .....	1-228	Installing Rear Spring .....	1-282
<b>PEDALS - BRAKE/CLUTCH</b> .....	1-231	<b>STARTER MOTOR</b> .....	1-285
Removing Brake and Clutch Pedals .....	1-231	Removing Starter Motor .....	1-285
<b>RADIUS BALL CAP ASSEMBLY</b> .....	1-234	Bench Testing .....	1-286
<b>RADIATOR</b> .....	1-235	Replacing Brushes .....	1-287
Radiator Flow Test .....	1-235	Disassembly, Inspection and Cleaning .....	1-287
Overflow Tube and Baffle .....	1-235	Reassembly .....	1-288
Removing Radiator .....	1-236	Installing Starter Motor .....	1-289
Installing Radiator .....	1-238	<b>STEERING ASSEMBLY</b> .....	1-290
<b>RADIATOR SHELL</b> .....	1-240	Removing Steering Assembly	
Removing Radiator Shell .....	1-240	(Through Engine Compartment) .....	1-291
Installing Radiator Shell .....	1-242	Removing Steering Assembly	
<b>RADIUS RODS</b> .....	1-243	(Through Driver Side Front Door) .....	1-293
Removing Front Radius Rod .....	1-243	2-Tooth Sector Steering Assembly Overhaul .....	1-295
Installing Front Radius Rod .....	1-248	Assembling 2-Tooth Gear Box .....	1-299
Removing Rear Radius Rods .....	1-253	Sector Worm Mesh Adjustment .....	1-301
Installing Rear Radius Rod .....	1-254	Centralization of Sector to Worm .....	1-302
<b>SHOCKS</b> .....	1-256	Steering Column Housing Repairs .....	1-302
Removing Shocks .....	1-256	Removing Control Rods and Upper Bushing .....	1-302
Disassembling Shock .....	1-257	Installing Control Rods and Upper Bushing .....	1-303
Assembling Shock .....	1-260	Installing Column on Steering Shaft .....	1-304
Installing Shock .....	1-260	7-Tooth Sector Steering Assembly Overhaul .....	1-305
<b>SPARE TIRE CARRIERS</b> .....	1-262	Assembling 7-Tooth Steering Gear .....	1-307
Rear Wheel Carriers .....	1-263	Replacing 7-Tooth Worm Gear .....	1-311
<b>SPEEDOMETER DRIVE GEAR</b> .....	1-264	Installing Steering Assembly in Car .....	1-312
Removing and Replacing Reduction		<b>STEERING WHEEL</b> .....	1-316
Ratio Case Assembly and Gear .....	1-265	Removing Steering Wheel .....	1-317
Removing Speedometer Drive Shaft Gear .....	1-265	<b>STOPLIGHT SWITCH</b> .....	1-318
Removing and Replacing		<b>TERMINAL BOX</b> .....	1-319
Speedometer Drive Gear .....	1-267	<b>THROWOUT BEARING</b> .....	1-320
<b>SPEEDOMETER</b> .....	1-270	Removing Throwout Bearing-	
Speedometer Removal and Disassembly .....	1-271	By Removing Rear End Assembly .....	1-320
Removing Oval Speedometer Indicator Wheels .....	1-273	Installing Transmission w/Throwout Bearing -	
Removing Round Speedometer		With Rear End Assembly Removed .....	1-322
Indicator Wheels .....	1-273	<b>TIMING GEAR</b> .....	1-324
Installing Speedometer .....	1-274		

## CONTENTS (continued)

<b>TRANSMISSION SHIFTING TOWER</b> .....	1-328
Shifting Tower Disassembly .....	1-328
Shifting Tower Assembly .....	1-328
<b>TRANSMISSION</b> .....	1-330
Production Design Changes .....	1-330
Transmission Removal-By Removing Engine .....	1-331
Transmission Removal-	
By Removing Rear End Assembly .....	1-333
Transmission Disassembly .....	1-334
Assembling Transmission .....	1-337
Inspection .....	1-337
Assembly .....	1-338
Installing Transmission-	
With Engine Removed .....	1-342
Installing Transmission-	
With Rear End Assembly Removed .....	1-344
<b>UNIVERSAL JOINT (U-JOINT)</b> .....	1-347
Removing U-Joint .....	1-347
<b>WATER PUMP</b> .....	1-352
Removing Water Pump	
(with 2-Blade Fan installed) .....	1-352
Removing Water Pump	
(with 4-Blade Fan installed) .....	1-354
Water Pump Disassembly .....	1-355
Water Pump Assembly .....	1-356
Modified Pump Shaft .....	1-357
Installing Water Pump w/2-Blade Fan .....	1-358
Installing Water Pump w/4-Blade Fan .....	1-359
<b>WHEEL BEARINGS</b> .....	1-361
Front Wheel Bearing .....	1-361
Rear Wheel Bearing .....	1-362
<b>WINDOW GLASS AND REGULATOR</b> .....	1-363
Removing Regulator .....	1-363
Installing Window Regulator .....	1-364
<b>WIRING</b> .....	1-365
Terminal Box-To-Generator Harness .....	1-365
Instrument Panel Harness .....	1-365

Main Harness .....	1-366
Coil (Black) Wire .....	1-367
Cowl Light Crossover .....	1-367

## SECTION II SERVICE ADJUSTMENTS

<b>SERVICE BRAKE ADJUSTMENT</b> .....	2-2
Brake Adjustment .....	2-2
<b>CASTER ADJUSTMENT</b> .....	2-6
Measuring Caster .....	2-6
<b>CARBURETOR ADJUSTMENT</b> .....	2-7
<b>CLUTCH PEDAL ADJUSTMENT</b> .....	2-8
<b>FAN BELT ADJUSTMENT</b> .....	2-9
<b>FRONT WHEEL BEARING ADJUST</b> .....	2-10
<b>GENERATOR CHARGING RATE</b> .....	2-10
Power House Generator .....	2-10
Cylinder Style Generator .....	2-11
<b>HEADLAMP FOCUSING AND ALIGNMENT</b> .....	2-11
<b>HORN ADJUSTMENT</b> .....	2-13
<b>SHOCK ABSORBER ADJUSTMENT</b> .....	2-13
<b>STEERING ADJUSTMENT</b> .....	2-14
7-Tooth Steering Shaft .....	2-14
End Play Adjustment .....	2-14
7-Tooth Sector Shaft End Play Adjustment .....	2-15
2-Tooth Sector Shaft End Play Adjustment .....	2-15
2-Tooth Sector Steering Shaft End Play Adjust ..	2-16
2-Tooth Sector Worm Mesh Adjustment .....	2-16
<b>IGNITION TIMING</b> .....	2-18
<b>TOE-IN ADJUST</b> .....	2-19
<b>VALVE GRINDING AND ADJUSTMENT</b> ..	2-20
Grinding and Seating Valves .....	2-20
Adjusting Valve Clearance	
(w/Adjustable Valve Lifters) .....	2-21
<b>FLYWHEEL HOUSING VARIATION</b> .....	2-22

## CONTENTS (continued)

### SECTION III LUBRICATION AND OIL

### SECTION IV TROUBLESHOOTING

Troubleshooting Chart 4-1	
Major System Isolation .....	4-2
Troubleshooting Chart 4-2	
Cooling System .....	4-4
Troubleshooting Chart 4-3	
Ignition System .....	4-5
Troubleshooting Chart 4-4	
Fuel System .....	4-6
Troubleshooting Chart 4-5	
Electrical System .....	4-7
Troubleshooting Chart 4-6	
Engine Noises .....	4-8

### ADDENDUM

Troubleshooting	
Generator (Charging )Circuit .....	4-9

### APPENDIX

PREVENTIVE MAINTENANCE CHECK LIST .....	A-1
MODEL A SAFETY CHECK LIST .....	A-2
MODEL A COTTER PIN USAGE CHART .....	A-3
BOLT - GRADE / TORQUE COMPARISON .....	A-4

### SPECIFICATION CARD

