


# Model A Ford

## TROUBLESHOOTING & DIAGNOSTICS

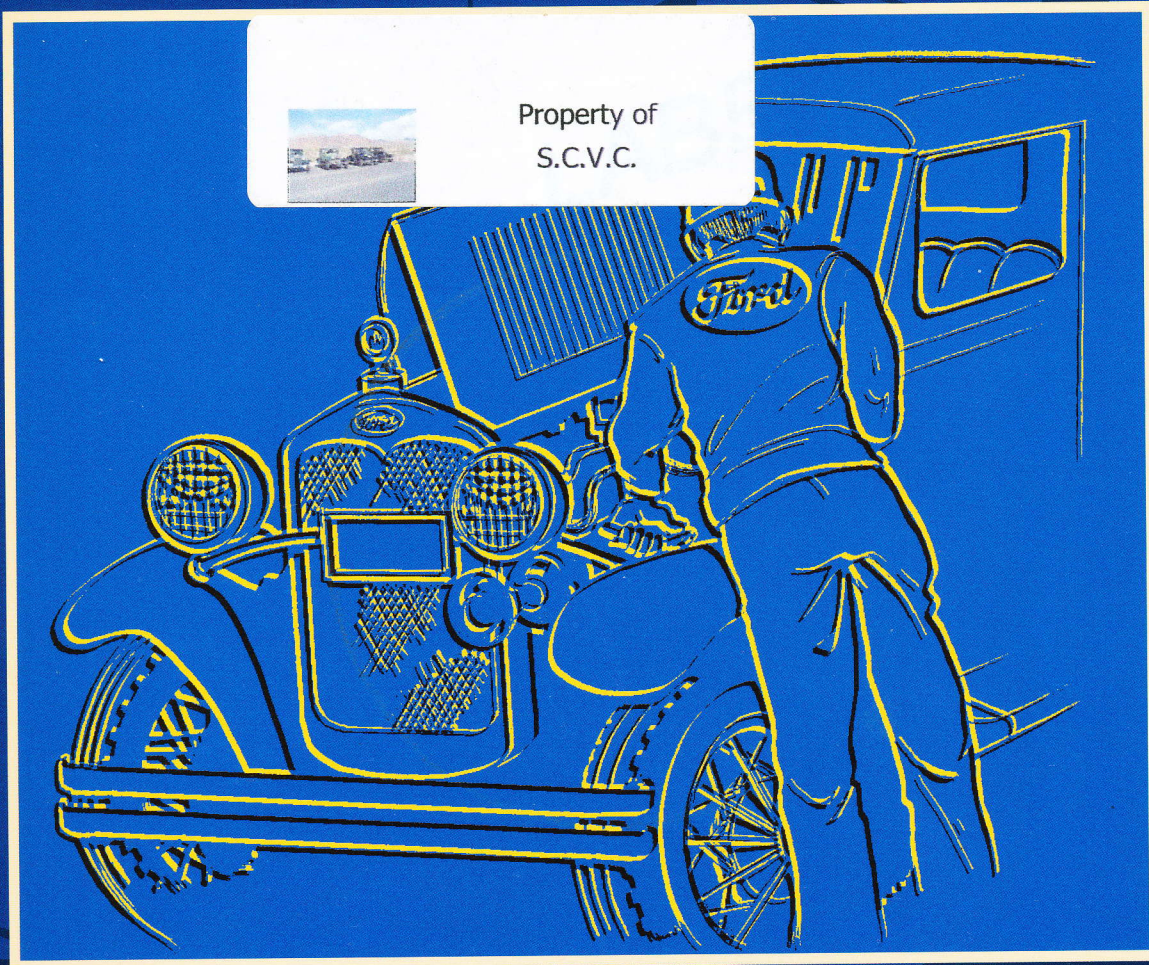

A COMPLETE GUIDE  
FOR TROUBLE ANALYSIS AND TESTING

Les Andrews



# CONTENTS

## SECTION I ON THE ROAD DIAGNOSTICS

INTRODUCTION .....	1-1
SPARK & IGNITION DIAGNOSTIC .....	1-2
SPARK PLUG & COMPRESSION DIAGNOSTIC .....	1-4
FUEL FLOW & CARBURETION DIAGNOSTIC .....	1-5
ELECTRICAL CIRCUIT DIAGNOSTIC .....	1-6
OVERHEATING DIAGNOSTIC .....	1-8

## SECTION II IN SHOP TESTING

INTRODUCTION .....	2-1
ENGINE PERFORMANCE & OPERABILITY .....	2-2
Cranking System Diagnostics .....	2-2
Battery Test .....	2-2
Battery Cable Test .....	2-2
Ground Strap Test .....	2-3
Starter Motor Test .....	2-3
Ignition & Timing Circuit Diagnostics .....	2-4
Ignition Primary Circuit Tests .....	2-4
Testing Ignition Points .....	2-4
Testing Condenser .....	2-5
Testing Coil .....	2-5
Testing Ignition Switch & Cable .....	2-6
Testing Terminal Box & Ammeter .....	2-6
Testing For Correct Timing .....	2-7
Ignition Secondary Circuit Test .....	2-8
Coil Secondary Winding Test .....	2-8
Coil Polarity Test .....	2-9
Alternate Coil Polarity Tester .....	2-10
Coil High Voltage Tester .....	2-10
Fuel System Diagnostics .....	2-10
Testing Fuel Flow .....	2-10
Testing Fuel System For Air Leaks .....	2-11
Testing Carburetor .....	2-12
Rich/Lean Fuel Mixture Test No. 1 .....	2-12
Rich/Lean Fuel Mixture Test No. 2 .....	2-13
Float Level Test .....	2-13
Float Valve Test .....	2-13
Idle Air Mixture Test .....	2-14
Engine Performance Diagnostics .....	2-15
Compression Gauge Test .....	2-15
Vacuum Gauge Test .....	2-16

Vacuum Diagnosis Chart .....	2-16
Reading Spark Plugs .....	2-20
Engine Noise Diagnosis .....	2-24
Cooling System Diagnostics .....	2-26
Coolant Leaks .....	2-26
Testing For Exhaust Gases .....	2-27
Radiator Flow Test .....	2-28
Radiator Inspection .....	2-28
Water Pump Failure .....	2-29
Electrical Circuit Diagnostics .....	2-30
Testing Charging System .....	2-31
Testing Cutout Relay .....	2-31
Testing Electrical Connections .....	2-32
Testing Ground system .....	2-33

## DRIVETRAIN PERFORMANCE & OPERABILITY 2-35

Clutch Diagnosis .....	2-35
Clutch Drag .....	2-35
Clutch Slips .....	2-36
Clutch Chatters .....	2-36
Pulsating Clutch Pedal .....	2-37
Clutch Rattles .....	2-37
Noise When Clutch Pedal Depressed .....	2-37
Noise When Clutch Pedal Released .....	2-37
Clutch Throw Out Bearing Noise .....	2-38
Pilot Bearing Noise .....	2-38
Transmission Diagnosis .....	2-38
Transmission Alignment w/Engine and Drive Shaft .....	2-38
Transmission Slips Out Of High Gear .....	2-39
Transmission Slips Out Of Low Gear .....	2-40
Transmission Slips Out Of Second Gear .....	2-41
Difficult Shifting .....	2-41
Noisy In All Gears .....	2-41
Noisy In Neutral .....	2-42
Noisy In Low And Reverse Gear Only .....	2-42
Noisy In Second Gear Only .....	2-43
Noisy In High Gear Only .....	2-43
Transmission Leaks Gear Lube .....	2-43
Differential/Rear End Diagnosis .....	2-44
Driveline Alignment Check .....	2-44
Road Testing Differential/Rear End .....	2-45
Axle/Driveline Noises .....	2-45
Noise On Acceleration .....	2-45
Noise On Coast .....	2-45
Noise On Both Coast And Acceleration .....	2-46
Noise When Rounding Corners .....	2-46
Backlash Noise .....	2-46



Vibration Noise .....	2-46
Differential Bearing Noise .....	2-46
Ring And Pinion Gear Noise .....	2-46
Steady Noise On Pull .....	2-46
Steady Noise On Coast .....	2-47
Bearing Noise On Pull Or Coast .....	2-47
Wheel Bearing Noise .....	2-47
Front End Diagnosis .....	2-47
Front End Wanders .....	2-47
Excessive Looseness .....	2-48
Hard Steering .....	2-49
Steering Pulls To One Side .....	2-49
Excessive Tire Wear .....	2-49
Cupped Tires .....	2-50
Tires Squeal On Turns .....	2-50
High Speed Shimmy .....	2-50
Brake System Diagnosis .....	2-50
Hard Pedal .....	2-50
Spongy Pedal .....	2-51
Brakes Squeal Or Chatter When Applied .....	2-51
Excessive Pedal Travel .....	2-51
Pull To One Side When Brakes Applied ...	2-52

### SECTION III SYMPTOMS, CAUSES & FIXES

INTRODUCTION .....	3-1
Engine Will Not Start .....	3-1
Engine Misses One Cylinder While Idling .....	3-6
Engine Misses any Cylinder Below 20MPH ....	3-7
Engine Misses At High Speed .....	3-9
Engine Misses At All Speeds .....	3-11
Poor High Speed Or Lack Of Power .....	3-13
Loss Of Engine Compression .....	3-15
Engine Backfires Through Carburetor .....	3-16
Pre-Ignition Or Spark Knock .....	3-16
Excessive Oil Consumption .....	3-17
Excessive Fuel Consumption .....	3-18
Fuel Delivery To Carburetor Insufficient .....	3-20
Ignition Troubles .....	3-20
Due To Wiring & Connections .....	3-20
Due To Distributor .....	3-21
Due To Battery .....	3-21
Due To Spark Plugs .....	3-22
Manifold Leaks .....	3-22
Starter Motor Not Operating .....	3-23
Generator Not Charging .....	3-24
Battery Discharges Frequently .....	3-25
Faulty Lighting .....	3-25
Engine Over Heating .....	3-26

Horn Does Not Operate Or Runs Poorly .....	3-27
Clutch Drags .....	3-28
Clutch Slips .....	3-28
Clutch Chatters .....	3-29
Pulsating Clutch Pedal .....	3-29
Clutch Rattles When Idling .....	3-29
Noise When Clutch Pedal Depressed .....	3-29
Noise When Clutch Pedal Released .....	3-30
Transmission Slips Out Of High Gear .....	3-30
Transmission Slips Out Of 2nd Gear .....	3-30
Transmission Slips Out Of Low Gear .....	3-31
Transmission Will Not Shift Into 2nd Gear .....	3-31
Transmission leaks Gear Lube .....	3-32
Front End Wanders From Side To Side .....	3-32
Hard Steering .....	3-33
Steering Pulls To One Side .....	3-33
Low Speed Shimmy .....	3-33
High Speed Shimmy .....	3-34
Tires Squeal On Turn .....	3-34
Excessive Tire Wear .....	3-34
Cupped Tire Wear .....	3-34
Hard Brake Pedal .....	3-34
Spongy Brake Pedal .....	3-34
Brakes Squeal Or Chatter When Applied .....	3-35
Excessive Pedal Travel .....	3-35
Pulls To One Side When Brakes Applied .....	3-35
NOISES .....	3-36
Main Bearing Knock .....	3-36
Excessive Crank End Play Noise .....	3-36
Connecting Rod Bearing Knock .....	3-36
Piston Noise .....	3-37
Wrist Pin Noise .....	3-37
Valve Noise .....	3-37
Timing Gear Knock .....	3-38
Pre-Ignition Spark Knock .....	3-38
Oil Pump/Distributor Shaft Noise .....	3-38
Starter Drive Noise .....	3-39
Generator Noise .....	3-39
Water Pump Noise .....	3-39
Fan & Belt Noise .....	3-40
Transmission Noisy In All Gears .....	3-40
Transmission Noisy In Neutral .....	3-40
Transmission Noisy In Low/Reverse Only .....	3-41
Transmission Noisy In 2nd Gear Only .....	3-41
Transmission Noisy In High Gear Only .....	3-41
Differential Noise On Acceleration .....	3-41
Differential Noise On Coast .....	3-41
Differential Noise On Acceleration and Coast .....	3-41
Differential Noise When Rounding Corners .....	3-42
Differential Backlash Noise .....	3-42
Differential Bearing Noise .....	3-42
Study Noise On Pull .....	3-42



Study Noise On Coast .....	3-43
Differential Bearing Noise On Coast Or Pull ....	3-43
Wheel Bearing Noise At Low Speed .....	3-43
High Pitch Squeal When Clutch Depressed ....	3-43
Clutch Chatter When Releasing Clutch Pedal .	3-43
U-Joint/Driveline Noise .....	3-43
VIBRATIONS .....	3-44
Engine Vibrations .....	3-44
Engine Vibration At High Speed Only .....	3-34
Steering Column Vibration/Rattle at 40MPH ...	3-44

## SECTION IV SYSTEM DESCRIPTIONS

INTRODUCTION .....	4-1
IGNITION CIRCUIT .....	4-1
Primary Circuit .....	4-2
Coil .....	4-2
Points And Condenser .....	4-3
Important Points To Remember .....	4-3
Secondary Circuit .....	4-4
Distributor Cap And Rotor .....	4-4
Distributor Body .....	4-4
Spark Plugs .....	4-5
ELECTRICAL SYSTEM DESCRIPTION .....	4-7
Fundamentals .....	4-7
Battery .....	4-9
Electrolyte .....	4-10
Discharging .....	4-10
Charging .....	4-10
Capacity .....	4-10
Standard Capacity Ratings .....	4-11
Battery Life .....	4-11
Charging A Storage Battery .....	4-11
Slow Charging .....	4-11
Starter Motor .....	4-12
Starter Motor Drive .....	4-13
Starter Switch .....	4-13
Ammeter .....	4-14
Generator .....	4-15
Basic Generator Principles .....	4-15
Field Coils .....	4-16
Armature/Commutator .....	4-16
Brushes .....	4-17
Third Brush .....	4-17
Cutout Relay .....	4-18
Horn .....	4-19
Lights .....	4-21
Stop Light Switch .....	4-21

FUEL SYSTEM DESCRIPTION .....	4-22
Fundamentals .....	4-22
Gas Tank .....	4-22
Gas Gauge .....	4-22
Carburetion .....	4-23
Zenith Carburetor .....	4-24
Start And Idle Circuit .....	4-24
Low Speed Circuit .....	4-25
High Speed Circuit .....	4-25
Fuel Float .....	4-26
ENGINE COMBUSTION & OPERATION .....	4-27
Fundamentals .....	4-27
Four-Stroke Engine .....	4-27
Engine Parts And Function .....	4-28
Cylinder Block .....	4-28
Cylinder Head .....	4-29
Piston .....	4-29
Connecting Rod .....	4-30
Crankshaft .....	4-30
Camshaft .....	4-31
Valves .....	4-32
Flywheel .....	4-32
Four Stroke Timing .....	4-33
Cylinder Timing And Balance .....	4-34
Cylinder Firing Order .....	4-34
Stroke vs Timing .....	4-34
UNDERSTANDING OILING SYSTEM .....	4-36
Top End Lubrication .....	4-36
Oil Cooling .....	4-36
Piston And Rod Cooling .....	4-36
Oil Pump Action .....	4-36
Changing Oil .....	4-37
COOLING SYSTEM DESCRIPTION .....	4-38
Fundamentals .....	4-38
Coolant Flow .....	4-38
Thermo-Syphon System .....	4-38
Pump System .....	4-38
Improved Performance .....	4-39
Two Blade Fan .....	4-40
Radiator .....	4-40
TRANSMISSION AND CLUTCH DESCRIPTION ..	4-41
Fundamentals .....	4-41
Operation .....	4-42
Low Gear .....	4-42
2nd Gear .....	4-42
High Gear .....	4-43
Reverse Gear .....	4-43
Precision Assembly .....	4-43
Gear Lubricant .....	4-44
Clutch Operation .....	4-44
Shifting Tower .....	4-46



DIFFERENTIAL/ REAR END DESCRIPTION .....	4-47
Fundamentals .....	4-47
Torque Tube .....	4-47
Drive Shaft .....	4-47
Axle Housing .....	4-48
Differential Assembly .....	4-48
Differential Gears .....	4-49
Ring And Pinion Gear Ratios .....	4-50
STEERING AND FRONT END DESCRIPTION .....	4-51
Fundamentals .....	4-51
Steering Gear .....	4-51
Seven Tooth Worm And Sector .....	4-52
Two Tooth Worm And Sector .....	4-53
Steering On Thrust Bearings .....	4-53
Front End Geometry .....	4-54
Caster .....	4-54
Camber .....	4-55
King Pin Inclination .....	4-56
Tow-In .....	4-56
Tow-Out .....	4-56
Front Axle And Radius Rods .....	4-57
SUSPENSION SYSTEM DESCRIPTION .....	4-58
Fundamentals .....	4-58
Transverse Springs .....	4-58
Chassis Frame .....	4-59
Shock Absorbers .....	4-59
BRAKE SYSTEM DESCRIPTION .....	4-61
Fundamentals .....	4-61
Service Brakes .....	4-61
Mechanical Linkage .....	4-62
Parking (Emergency) Brake .....	4-63

## SECTION V ADJUSTMENTS AND ALIGNMENTS

INTRODUCTION .....	5-1
SERVICE BRAKE ADJUSTMENT .....	5-2
Brake Adjustment .....	5-2
CASTER ADJUSTMENT .....	5-6
Measuring Caster .....	5-6
CARBURETOR ADJUSTMENT .....	5-7
CLUTCH PEDAL ADJUSTMENT .....	5-8
FAN BELT ADJUSTMENT .....	5-9
FRONT WHEEL BEARING ADJUST .....	5-10
GENERATOR CHARGING RATE .....	5-10
Power House Generator .....	5-10
Cylinder Style Generator .....	5-11
HEAD LAMP FOCUSING AND ALIGNMENT .....	5-11
HORN ADJUSTMENT .....	5-13

SHOCK ABSORBER ADJUSTMENT .....	5-13
STEERING ADJUSTMENT .....	5-14
7-Tooth Steering Shaft .....	5-14
End Play Adjustment .....	5-14
7-Tooth Sector Shaft End Play Adjustment .....	5-15
2-Tooth Sector Shaft End Play Adjustment .....	5-15
2-Tooth Sector Steering Shaft End Play Adjust .....	5-16
2-Tooth Sector Worm Mesh Adjustment .....	5-16
IGNITION TIMING .....	5-18
TOE-IN ADJUST .....	5-19
VALVE GRINDING AND ADJUSTMENT .....	5-20
Grinding and Seating Valves .....	5-20
Adjusting Valve Clearance (w/Adjustable Valve Lifters) .....	5-21
FLYWHEEL HOUSING VARIATION .....	5-22
FLYWHEEL WOBBLE TEST .....	5-23

## SECTION VI TEST INSTRUMENTS FOR TESTING & TROUBLESHOOTING

Digital Multimeter .....	6-1
Analog Volt/Ohm Meter .....	6-1
Ignition Timing Test Light .....	6-2
Carburetor Float Gauge .....	6-2
Float Level Site Gauge .....	6-2
Float Valve Test Jar .....	6-2
Hydrometer .....	6-3
Compression Gauge .....	6-3
Vacuum Gauge .....	6-3
Feeler Gauge .....	6-3
Coil Polarity Tester (Sparklite) .....	6-4
Coil High Voltage Tester ('C' Spark) .....	6-4
Stethoscope .....	6-4
Protractor Level .....	6-4
Calibers .....	6-5
Micrometer .....	6-5
Flywheel Housing Warp Gauge .....	6-5
Flywheel Wobble Gauge .....	6-5
Torque Wrenches .....	6-5
Tools & Spare Parts For The Touring Tool Box .....	6-6